

## ARC-8050T3U series

4/6(M)/8/12-bays Thunderbolt™ 3 RAID Storage



### Step 1: Unpack the ARC-8050T3U Unit

#### Checklist

- 1 x ARC-8050T3U-4/6(M)/8/12 bays RAID storage unit
- 1 x 40Gbps Thunderbolt 3 Type-C Cable (1 meter) cable
- 1 x 10Gbps USB Type-C Cable (1 meter) cable
- 1 x RJ-45 LAN cable
- 1 x Power cord
- 16/24/32/48 x Drive mounting screws (4 per drive tray)
- 1 x Quick installation guide

### Step 2: Install SAS/SATA Drives


Secure the drive to the tray by four of the mounting screws and slide all drives into the enclosure.

### Step 3: Connect Thunderbolt 3 Ports on RAID Storage

Thunderbolt connectors are provided on the back of the ARC-8050T3U RAID storage for connecting the array to Thunderbolt host or USB host.

#### Thunderbolt Computer Port Connection

Connect ARC-8050T3U RAID storage and Thunderbolt capable computer Thunderbolt port with the Thunderbolt 3 icon using the included Thunderbolt 3 cable as shown below:

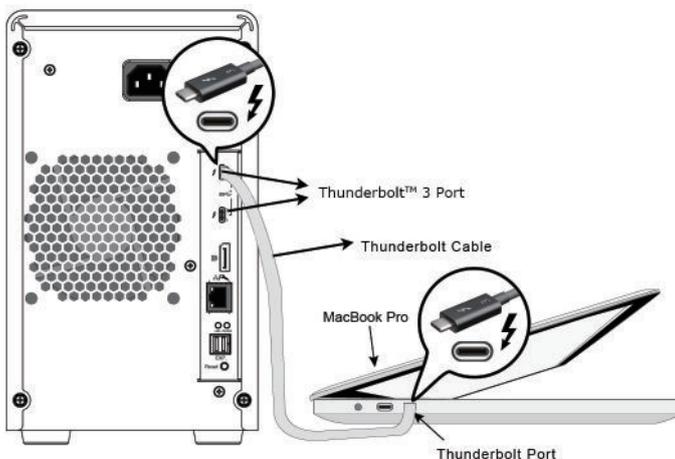


#### NOTE:

A single Thunderbolt technology daisy chain can have seven devices, including the computer. Connect the cable to one of the interface ports on the back of your ARC-8050T3U RAID storage and to your Thunderbolt capable computer. The additional port may be used to daisy chain compatible computer peripherals, such as hard drives, monitors, and much more.


#### USB-only Computer Port Connection

Your USB-only computer can recognize up to 1 volume when connecting any Thunderbolt 3 port on the ARC-8050T3U. The additional port can't support the daisy chain function.

- Computer with a USB-C port  
Connect ARC-8050T3U RAID storage and USB-only computer USB-C port with the USB 3.2 Gen 1 or USB 3.2 Gen 2 icon using the included USB-C cable as shown below:

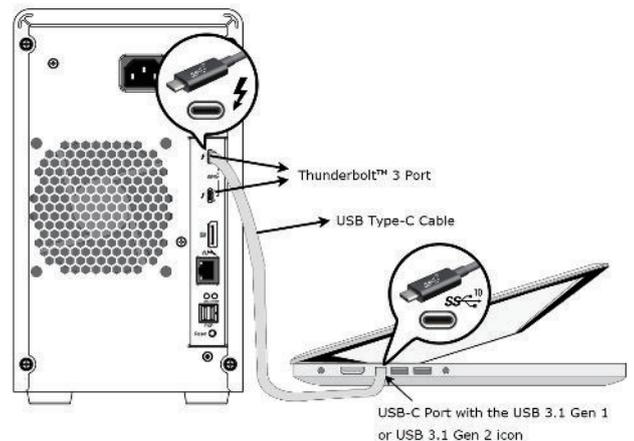


- Computer with a USB 3.2 Gen 1 or USB 2.0 port (Type A)  
Connect ARC-8050T3U RAID storage and USB-only computer USB X.X port with the USB 3.2 Gen 1 (USB 3.0) or USB 2.0 icon using the included USB-C cable and USB Type-C to Type A adapter as shown below:

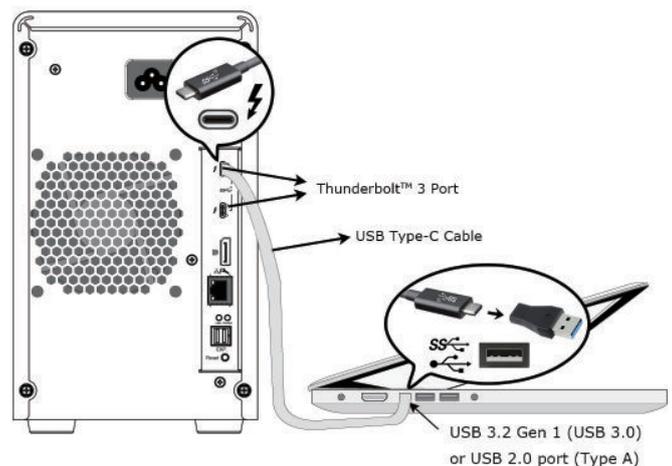

### Step 4: Expansion Port Connection (Optional)

The ARC-8050T3U-6M/6/12 12Gb/s SAS RAID storages contain one SFF-8644 expansion port that can connect up to 7 expander enclosures. The maximum drive no. is 256 through this RAID storage with 7 expander enclosures.

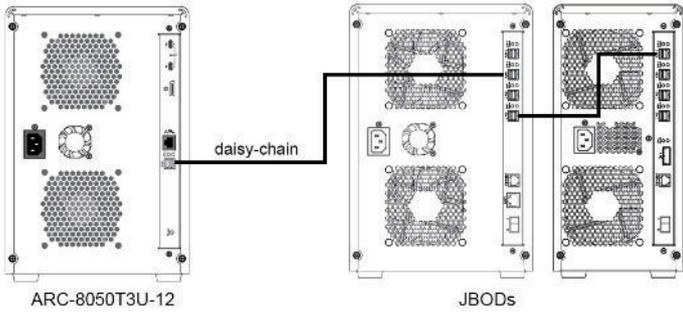

### Step 5: Connect Monitor Port - LAN Port (Optional)

User can remote manage the RAID enclosure without adding any user specific software (platform independent) via standard web browsers directly connected to the 10/100Mbit RJ45 LAN port. Connect LAN port of the ARC-8050T3U using the included Ethernet cable and then to a LAN port or LAN switch.

### Step 6: Connect Power Cord

1. Connect power cord to a grounded electrical outlet and to the ARC-8050T3U RAID storage.
2. ARC-8050T3U RAID storage will automatically turn on when host computer power on status is received from the thunderbolt cable. It takes about 30 seconds to fully start up the RAID storage.
3. ARC-8050T3U RAID storage automatically turns off when the computer to which it is attached sleeps or is disconnected.

### Step 7: Install the MRAID Software Package


1. Download the install\_mraid installer from the website at "<https://www.areca.com.tw/support/downloads.html>"
2. Double-click on the install\_mraid zipped file. **(PC)**
3. Double-click the install\_mraid software from the downloads folder **(Mac)** or the "setup.exe" unzip file **(PC)** for installing MRAID.
4. Follow the installer on-screen steps to complete the installation.

### Step 8: Configure RAID Volumes


Your ARC-8050T3U series can be configured by McRAID Storage Manager from ArchHTTP (Thunderbolt port), McRAID Storage Manager Through LAN port or LCD Panel with Keypad.

#### ※ Method 1: McRAID Storage Manager From ArchHTTP


1. There is one "MRAID" icon showing on your desktop. Double-click on the "MRAID" icon to locate your ArchHTTP utility and CLI program file folder.

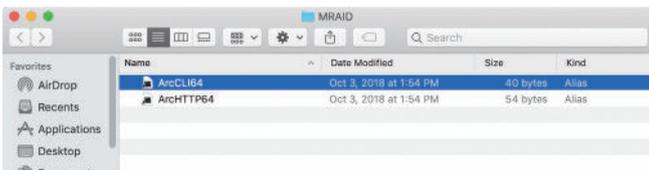

2. When you double-click on the "ArchHTTP64", it shows all RAID storages available on the system and create an individual RAID storage icon located on left column of the "ArchHTTP Configurations" screen.

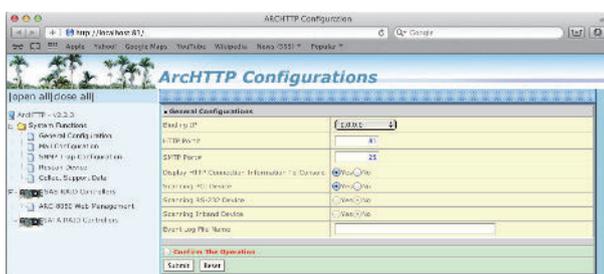

3. Locate "ARC-8050T3U Web Management" and launch the selected McRAID storage manager.

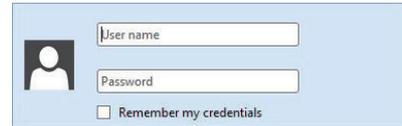


Enter RAID storage default User Name "admin" and the Password "0000" when the login page prompted for it. After logging in, the McRAID storage manager process starts.



Click on the "Quick Create" in the main menu, your volume is automatically configured based on the number of disks in your system. You can create a RAID set associated with exactly one volume set. The user can change the Raid Level, Capacity, Initialization Mode, and Stripe Size. A hot spare option is also created, depending on the exist configuration. Tick on the "Confirm The Operation" check box and click on the "Submit" button, the RAID set and volume set will start to initialize. If you prefer to customize your volume set, please use the "Raid Set Functions" and "Volume Set Functions". See chapter 4 of ARC-8050T3U user manual for information on customizing your RAID volumes using McRAID storage manager. Otherwise, to begin using the ARC-8050T3U right away.

#### ※ Method 2: LCD Panel with Keypad (Optional)

You can use LCD front panel and keypad function to simply create the RAID volume. The LCD status panel also informs you of the disk array's current operating status at a glance. The LCD provides a system of screens with areas for information, status indication, or menus. **The manufacture default password is set to 0000.** The initial screen is as following:

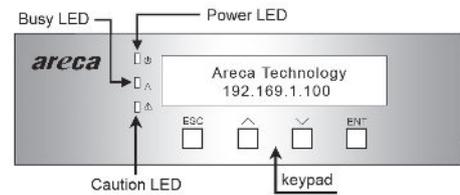

For additional information on using the LCD to configure the RAID subsystem see the LCD manual. You can download it from the website below:

[http://www.areca.us/support/download/RaidCards/Documents/Manual\\_Spec/LCD\\_manual.zip](http://www.areca.us/support/download/RaidCards/Documents/Manual_Spec/LCD_manual.zip)

#### ※ Method 3: McRAID Manager From LAN Port (Optional)

User can remote manage the ARC-8050T3U series without adding any user specific software (platform independent) via standard web browsers directly connected to the Gigabit Ethernet RJ45 LAN port. The IP address default shows in the LCD screen. Launch the Web Browser-based RAID manager by entering [http://\[IP Address\]](http://[IP Address]) in the web browser.

Type the User Name and Password. **The RAID controller default User Name is "admin" and the Password is "0000".** After entering the user name and password, click the button to access the McRAID storage manager.

See the chapter 4 of Web Browser-based Configuration on the user manual detailing the McRAID Storage Manager to customize your RAID configuration.

If you need more detail information, please download ARC-8050T3U manual from the website below:

- [https://www.areca.com.tw/products/thunderbolt\\_8050T3U.html](https://www.areca.com.tw/products/thunderbolt_8050T3U.html)
- <https://www.areca.com.tw/support/downloads.html>

**areca**® *At the Heart of Storage*

TEL:886-2-87974060 FAX: 886-2-87975970

Technical Support: support@areca.com.tw

Sales Information: sales@areca.com.tw

